

SET THE IDU MANUALLY(SW03)									
1	2	3	4	5	6	7	8	IDU Address	Central controller display
ON means manually	64	32	16	8	4	2	1		
ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	0	1
ON	OFF	OFF	OFF	OFF	OFF	OFF	ON	1	2
ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	2	3
ON	OFF	OFF	OFF	OFF	OFF	ON	ON	3	4
ON	OFF	OFF	OFF	OFF	ON	OFF	OFF	4	5
ON	OFF	OFF	OFF	OFF	ON	OFF	ON	5	6
ON	OFF	OFF	OFF	OFF	ON	ON	OFF	6	7
ON	OFF	OFF	OFF	OFF	ON	ON	ON	7	8
ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	8	9
ON	OFF	OFF	OFF	ON	OFF	OFF	ON	9	10
ON	OFF	OFF	OFF	ON	OFF	OFF	ON	10	11
ON	OFF	OFF	OFF	ON	OFF	ON	OFF	11	12
ON	OFF	OFF	OFF	ON	ON	OFF	OFF	12	13
ON	OFF	OFF	OFF	ON	ON	OFF	ON	13	14
ON	OFF	OFF	OFF	ON	ON	ON	OFF	14	15
ON	OFF	OFF	OFF	ON	ON	ON	ON	15	16
ON	OFF	OFF	ON	OFF	OFF	OFF	OFF	16	17
ON			ON				ON	17	18
ON			ON			ON		18	19
ON			ON			ON	ON	19	20
ON			ON		ON			20	21
ON			ON		ON		ON	21	22
ON			ON		ON	ON		22	23
ON			ON		ON	ON	ON	23	24
ON			ON	ON				24	25
ON			ON	ON			ON	25	26
ON			ON	ON		ON		26	27
ON			ON	ON		ON	ON	27	28
ON			ON	ON	ON			28	29
ON			ON	ON	ON		ON	29	30
ON			ON	ON	ON	ON		30	31
ON			ON	ON	ON	ON	ON	31	32
ON		ON						32	33
ON		ON					ON	33	34
ON		ON				ON		34	35
ON		ON				ON	ON	35	36
ON		ON			ON			36	37
ON		ON			ON		ON	37	38
ON		ON			ON	ON		38	39
ON		ON			ON	ON	ON	39	40
ON		ON		ON				40	41
ON		ON		ON			ON	41	42
ON		ON		ON		ON		42	43
ON		ON		ON		ON	ON	43	44
ON		ON		ON	ON			44	45
ON		ON		ON	ON		ON	45	46
ON		ON		ON	ON	ON		46	47
ON		ON		ON	ON	ON	ON	47	48
ON		ON	ON					48	49
ON		ON	ON				ON	49	50
ON		ON	ON			ON		50	51
ON		ON	ON			ON	ON	51	52
ON		ON	ON		ON			52	53
ON		ON	ON		ON		ON	53	54
ON		ON	ON		ON	ON		54	55
ON		ON	ON		ON	ON	ON	55	56
ON		ON	ON	ON				56	57
ON		ON	ON	ON			ON	57	58
ON		ON	ON	ON		ON		58	59
ON		ON	ON	ON		ON	ON	59	60
ON		ON	ON	ON	ON			60	61
ON		ON	ON	ON	ON		ON	61	62
ON		ON	ON	ON	ON	ON		62	63
ON		ON	ON	ON	ON	ON	ON	63	64
ON	ON								